



## WATER PITCHER & PURIFYING STICKS/STONES

### INSTRUCTIONS:

1. Take IOUSEKI stones and BINCHOTAN charcoals out of plastic bag and wash them thoroughly with water until all the stone powders have been washed away.
2. Wash the inner cartridge and the pitcher with warm water and dish soap before use (to remove the inner cartridge, simply lift from the handle).
3. After washing the cartridge with water, fill with IOUSEKI stones first and then with BINCHOTAN charcoals. Please make sure to place the cartridge lid firmly onto the cartridge to avoid loosening during use.
4. Fill the pot with tap water and replace the upper cap. Let the water sit in the fridge for an hour to insure optimum freshness.
5. Make sure all parts of the pitcher are placed correctly before pouring, see diagram below:
6. For serving the water, turn the upper cap so the spout matches the round circle mark on the lower cap. Pour and Enjoy!

