




- ① LAY THE STORAGE BOXES ON THE GROUND. LIFT THE BACK EDGE AND ATTACH THE LEG BLOCKS.

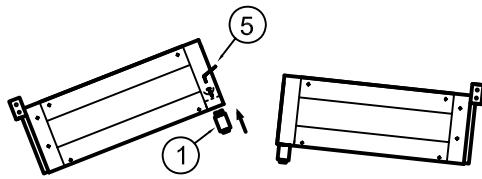


- ② SLIDE THE STYROFOAM ASSEMBLY BLOCK PROVIDED UNDER THE FRONT EDGES OF STORAGE BOXES SO THEY ARE SUPPORTED AND LEVEL.

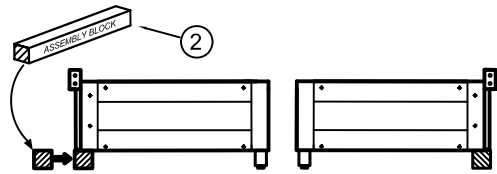


- ③ HOOK THE HEADBOARD ON TO THE STORAGE BOX RAILS.

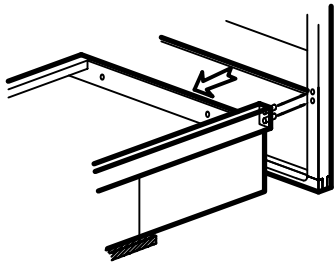


- ④ SLIP ASSEMBLY BOLTS INTO THE TOP TWO HOLES FIRST AND TIGHTEN BY HAND, JUST TO HOLD IN THE HEADBOARD IN PLACE.

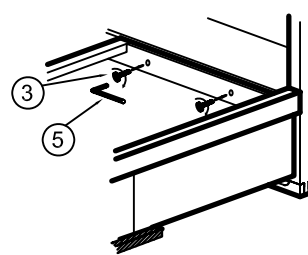


- ⑤ BOLT THE HEADBOARD USING 6 BOLTS FOR EACH STORAGE BOX. EXTEND THE DRAWERS FULLY TO ACCESS THE HOLES.

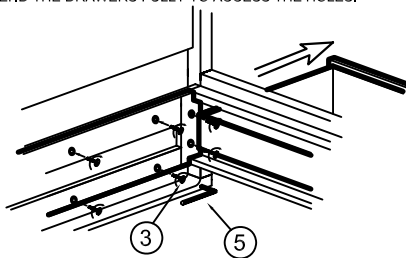



- ⑥ ATTACH THE FOOTBOARD IN THE SAME WAY USING 6 BOLT HOLES PER STORAGE BOX.

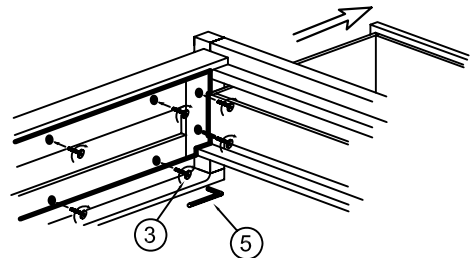



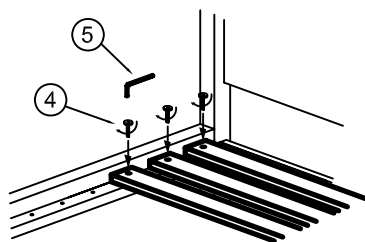


- ⑦ BOLT THE BED SLATS IN PLACE TIGHTLY
Note - THE TOP SIDE OF EACH SLAT IS COUNTER-SUNK TO ACCOMMODATE THE BOLT HEADS

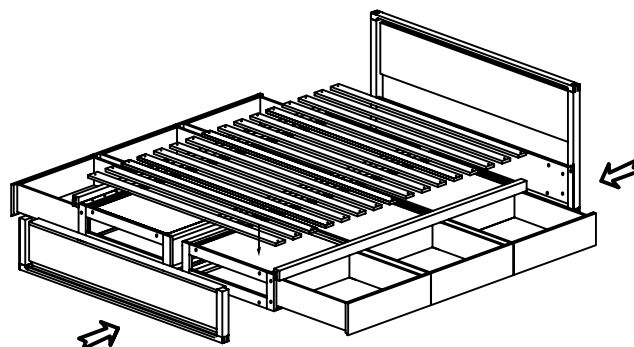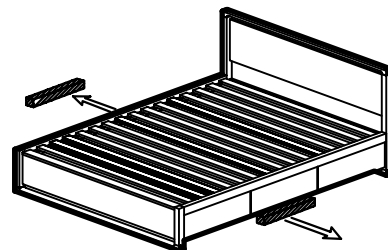

- ⑧ REMOVE THE STYROFOAM ASSEMBLY BLOCKS.

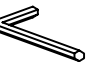

① X4  LEG BLOCK	② X2  ASSEMBLY BLOCK	③ X24  BOLT M6 35MM	④ X42  BOLT M6 35MM	⑤ X2  ALLEN KEY M4
---	--	---	---	--