


# MIRRA™ CHAIR ASSEMBLY INSTRUCTIONS

## TOOLS REQUIRED




13 mm SOCKET

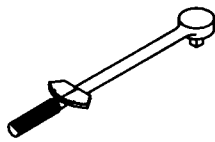

TORQUE WRENCH


## PARTS INCLUDED

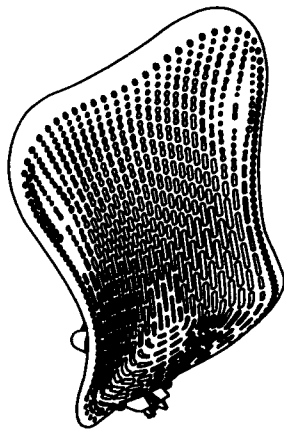

CHAIR BACK ASSEMBLY



HARDWARE PACK

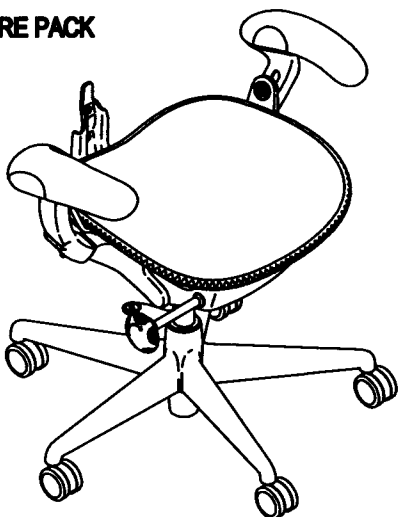


CHAIR BASE ASSEMBLY

## PROCEDURE:

# 1

### NOTICE

Remove all chair components from packaging and inspect for any damage which may have occurred during shipping, prior to assembling chair.

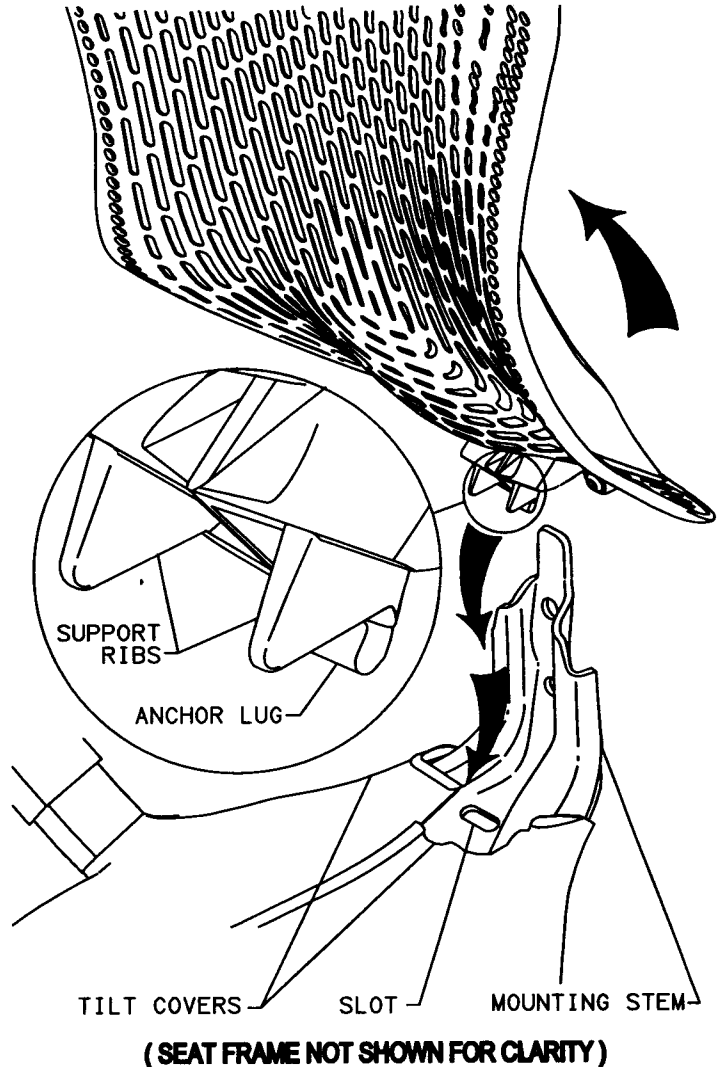



**NOTE:** A clean location with padded or carpeted surface for assembly is recommended.

1. While holding chair back vertically, rotate top forward slightly. Slide lower end of back assembly onto mounting stem while inserting support ribs under tilt covers.
2. Chair back assembly will nest properly on mounting stem when anchor lug engages slot in base of mounting stem.

1B0Z8S REV A

© 2003 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.  
® Herman Miller, ® Action Office, Aeron, Ambi, Arrio, Capex, Co/Struc, CLT, Eames, Equa, Equa 1, Equa 2, Ergon, Ergon 2, Ergon 3, Ethospace, E-Wall, Hollington, Kinemat, Kiva, Liaison, Meridian, Milcare, Passage, Pellicle, Proper, Prospects, Reaction, Resolve, Scooter, SQA, Super Room, and V-Wall are among the registered trademarks of Herman Miller, Inc.  
TM Bubbletack, Burdick Group, Chadwick, Flex-Edge, ID, Milafin, Multiscrim, Multiscrim 2, and Q are among the trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

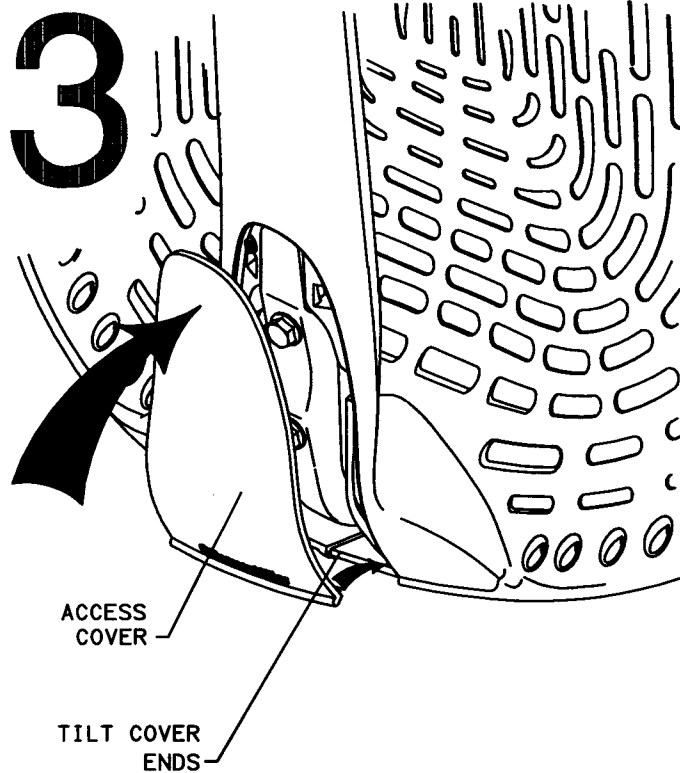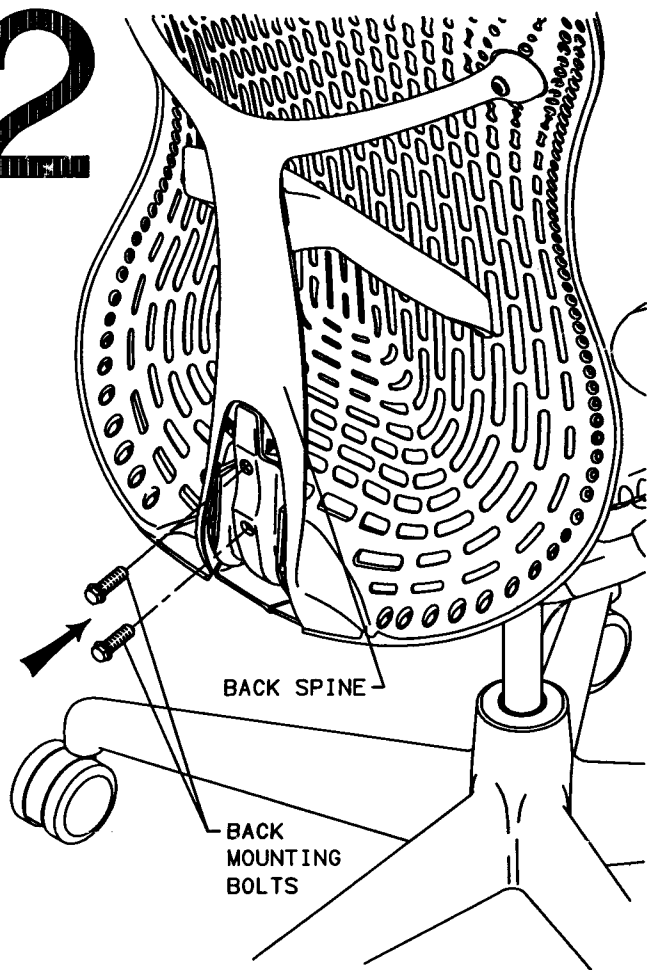

1. Engage lower lip, on back surface of access cover, onto tilt cover ends.
2. Rotate access cover up and snap cover into place, by hand, until flush with surface of back spine.

By hand, install (2) back mounting bolts, included in hardware pack, through mounting stem and into back spine, until bolts are finger tight.

**⚠ WARNING**  
Torque back mounting bolts to value noted. Assembly of product, other than specified (e.g. excessive torque), may result in damaging and unsafe usage of product.

Using 13 mm socket and torque wrench, torque back mounting bolts to 220-240 inch-lbs.